

Replacement of the filter

New value of your septic system



1 Removing

The used filter is removed from the Ecoflo[®] with a pump-out truck similar to those used for pumping out septic tanks. This step is carried out by professionals: it is simple and causes no damage to your lot or landscaping.

2 Filling

The new filter is then placed inside the Ecoflo[®], and the system is ready to start working again. This new value of your system includes a warranty renewal. Thanks to this patented filter, wastewater from your residence will be treated properly while protecting your health and your environment.

3 Disposing

The used filter is finally disposed of in a composting or waste recovery site. When combined with other types of organic matter, the used filter is an excellent vegetation cover for revegetation sites.